

# ennotek


## GIANT AIRPOD BT SPEAKER

We hope you enjoy our Giant Earpod Pro BT Speaker!

Please first make sure that it is unbroken and there are no freely moving objects inside the product.

# OPERATIONS MANUAL

MODEL NO.: GIANT AIRPOD PRO2 BT SPEAKER

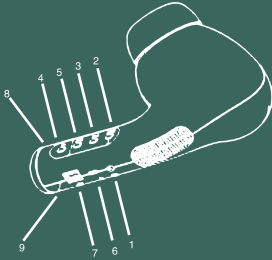

### PRODUCT FEATURES

1. Support Bluetooth/TF Card/FM Radio play mode
2. Built-in rechargeable battery, lasts for up to 2 hours in playtime depending on usage
4. Strong bass sound
5. Super Cute design
6. Pairs with most any Bluetooth supported devices

### BLUETOOTH PAIRING

When you turn on the speaker first time you will hear a voice instruction saying, "Bluetooth mode, the Bluetooth device is ready to pair." Make sure you turn on your mobile phones to search for BT setting, then sle connected to BT SPEAKER as successfully

### TF MODE PLAYING

Insert the tf card into slot, it will search and play the stored music automatically.

### FM RADIO FUNCTION

1. Press the No.1 button, the default is Bluetooth mode when you power on.
2. Press the No.2 (Mode switch button) to switch to radio mode.
3. Long-press the No.4 (Play/Pause key) - it automatically scans FM stations and auto saves the station
4. Press the No.3 button for (Previous song button)
5. Press the No.5 (Next song button) to switch FM station channels

### SPECIFICATIONS

Speaker Output: 5W 4Ω

Speaker Size: 123 172 111mm.

Bluetooth Version: JL5.0

Frequency Resp: 20Hz-18KHz

SNR: 65dB

Impedance: 4ohm

Built-in Battery: 3.7V 1200mAh

## PRE-CAUTIONS

Usage precautions: Use the product for its intended purpose only

- Turn off the device each time, when it is not planned to use it for extended period of time
- Keep away from vibrations and mechanical stresses, which can cause mechanical damaging of the product
- In case of mechanical damage no warranties are provided
- Do not disassemble this product – any tampering shall void all warranties.
- Keep away from children under the age of 3 as it may contain small parts
- Do not use the product at temperatures below and above typical room temperature /humidity as well as in any hostile environments
- Do not use in the presences of visual damage. Do not use when the product is obviously defective
- Do not use the product for industrial, medical, or manufacturing purpose.
- While receiving the product make sure that it's unbroken and there are no freely moving object inside the product

## WARRANTY

Product is under 30 day warranty, please bring to your retailer for exchange with a valid receipt.